

## Fitting instructions for outside temperature sensor

**Location:** If the rooms in which the temperature is to be regulated all face the same direction, the temperature sensor has to be fitted on that side.

In all other cases, ensure that the temperature sensor is fitted on the coldest side of the building (north, north-east).

The temperature sensor is not to be fitted above windows or doors because of the convecting warm air, neither should it be fitted in a recess (niche) in a wall.

**Electrical connection:** The connection voltage must be 12 volts. A  $0.75 \text{ mm}^2$  cross-section cable is sufficient for a 100 m line.

Electrical connection according to wiring diagram.

